



# PANEL FITTING INSTRUCTIONS

DO NOT FIT THE PANEL UNTIL THE INSTALLATION HAS BEEN COMPLETED AND THE WALLS HAVE BEEN TILED. IT MAY BE NECESSARY TO TRIM THE PANEL TO LENGTH. IF THIS IS REQUIRED USE A FINE TOOTH SAW.

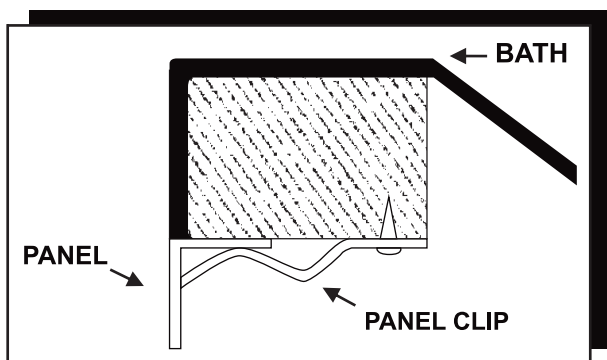

END PANEL (IF REQUIRED)

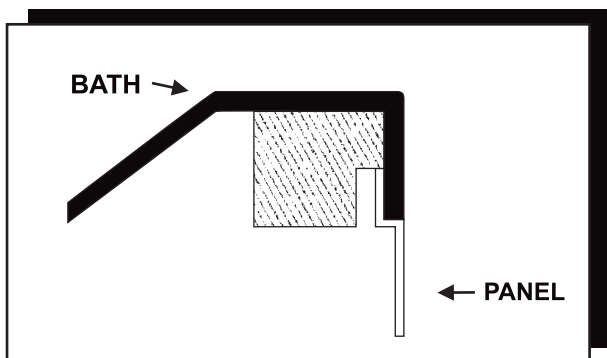

IT IS ALSO RECOMMENDED THAT A WOODEN BATTON IS FITTED TO THE FLOOR TO ALSO SUPPORT BASE OF ANY PANEL TYPE PURCHASED.